

Command Example Command Description	Command Example Command Description	Command Example Command Description
tunnel group name type ipsec-l2l	Cisco-ASA-appliance-1 (config)# tunnel-group 198.51.100.100 type ipsec-l2l	Specify a name for the tunnel group and specify the tunnel type as ipsec-l2l, which stands for IPsec LAN to LAN. This example creates a tunnel group with name 198.51.100.100, which the IP address of the tunnel end point at the NetScaler end.
tunnel-group name ipsecattributes	Cisco-ASA-appliance-1 (config)# tunnel-group 198.51.100.100 ipsec-attributes	Enter the ipsec-attributes configuration mode.
ikev1 preshared- key keystring	Cisco-ASA-appliance-1 (config-tunnelipsec)# ikev1 pre-shared-key examplepresharedkey	Specify a pre-shared key for the IKE authentication. This example configures shared key examplepresharedkey to be used with the NetScaler appliance NS_Appliance-1 (198.51.100.100). The same pre-shared key must be configured on the NetScaler appliance for IKE authentication to be successful between the Cisco ASA appliance and the NetScaler appliance.