

# Quick Access Links



## New password for appliances

The appliance and LOM passwords are set to the Citrix serial number, which is displayed on the rear of appliance. For more information, see [Platform editions](#).

## Licensing

For information about local, remote, centralized, and managing licenses, see [Licensing](#).



## Installing the Hardware

For information about how to install the hardware, see [Installing the Hardware](#).

## After Installation

After installing the hardware, perform initial configuration of the Citrix SD-WAN appliance and then configure features as per your requirement. For details, see [Citrix SD-WAN documentation](#).



## Citrix SD-WAN 110 SE/110 LTE WiFi

For information about Citrix SD-WAN 110 SE/110 LTE WiFi, see the following:

- [Citrix SD-WAN 110 SE/ 110 LTE WiFi Platform](#)
- [Citrix SD-WAN 110 SE Quick Start Guide](#)
- [Citrix SD-WAN 110 LTE WiFi Quick Start Guide](#)
- [Citrix SD-WAN 110 LTE WiFi Unboxing and Installation](#)

## Data Sheets

To view the data sheets of the hardware models, see [Citrix SD-WAN Data Sheets](#).



## Product Documentation

To view the complete hardware documentation, see [Citrix SD-WAN Platforms](#).