

Quick Access Links



New password for appliances

The appliance and LOM passwords are set to the Citrix serial number, which is displayed on the rear of appliance. For more information, see [Platform editions](#).

Licensing

For information about local, remote, centralized, and managing licenses, see [Licensing](#).



Installing the Hardware

For information about how to install the hardware, see [Installing the Hardware](#).

After Installation

After installing the hardware, perform initial configuration of the Citrix SD-WAN appliance and then configure features as per your requirement. For details, see [Citrix SD-WAN documentation](#).



Citrix SD-WAN 210 SE/210 SE LTE

For information about Citrix SD-WAN 210 SE/210 SE LTE, see [Citrix SD-WAN 210 SE/210 SE LTE](#).

Data Sheets

To view the data sheets of the hardware models, see [Citrix SD-WAN Data Sheets](#).



Product Documentation

To view the complete hardware documentation, see [Citrix SD-WAN Platforms](#).