




Installing the Hardware

For information about rack mounting and installing the Citrix SD-WAN hardware appliance, see [Install Hardware](#).

After Installation

After installing the hardware, perform the initial configuration of the Citrix SD-WAN appliance and then configure the SDWAN feature as per your requirement. For details, see [Citrix SD-WAN documentation](#).

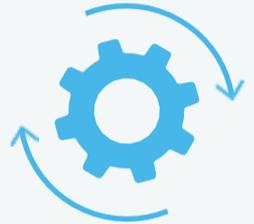

Citrix SD-WAN 4100 SE

For information about Citrix SD-WAN 4100 SE, see [Citrix SD-WAN 4100 SE](#).

Licensing

For information about local, remote, centralized, and managing licenses, see [Licensing](#).



Data Sheets

To view the data sheets of the hardware models, see [Citrix SD-WAN Data Sheets](#).

Product Documentation

To view the complete hardware documentation, see [Citrix SD-WAN Platforms](#)

